
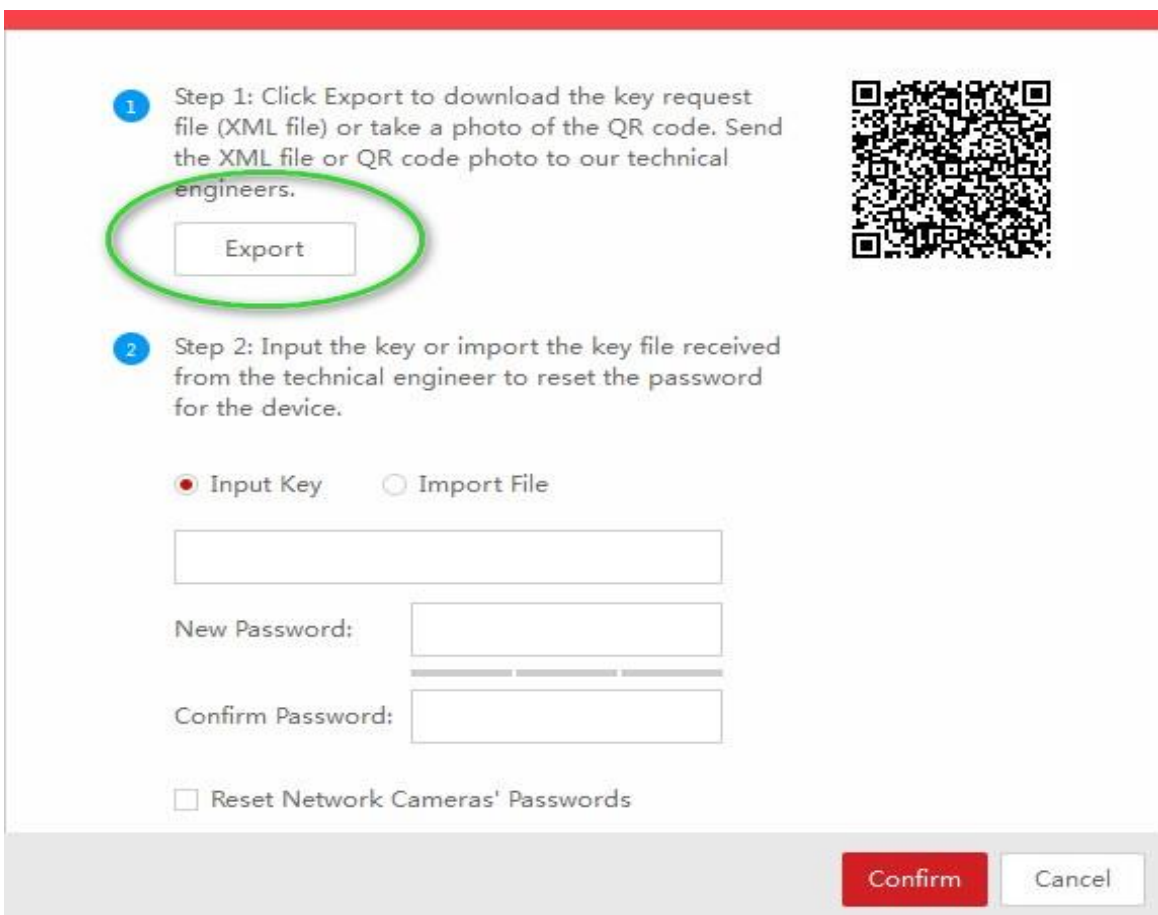


WORLD CCTV

MANUAL

1. Plug IP camera/DVR/NVR to the router by ethernet cable.
2. Get a windows computer that is connected to the same router. Install software. Here is the software download link.
<https://world-cctv.space/wp-content/share/SADPTool.exe>
3. Run the software and it will detect the camera IP or NVR/DVR.
4. Select the DVR/NVR/camera IP and click forget a password at the right bottom of the software.

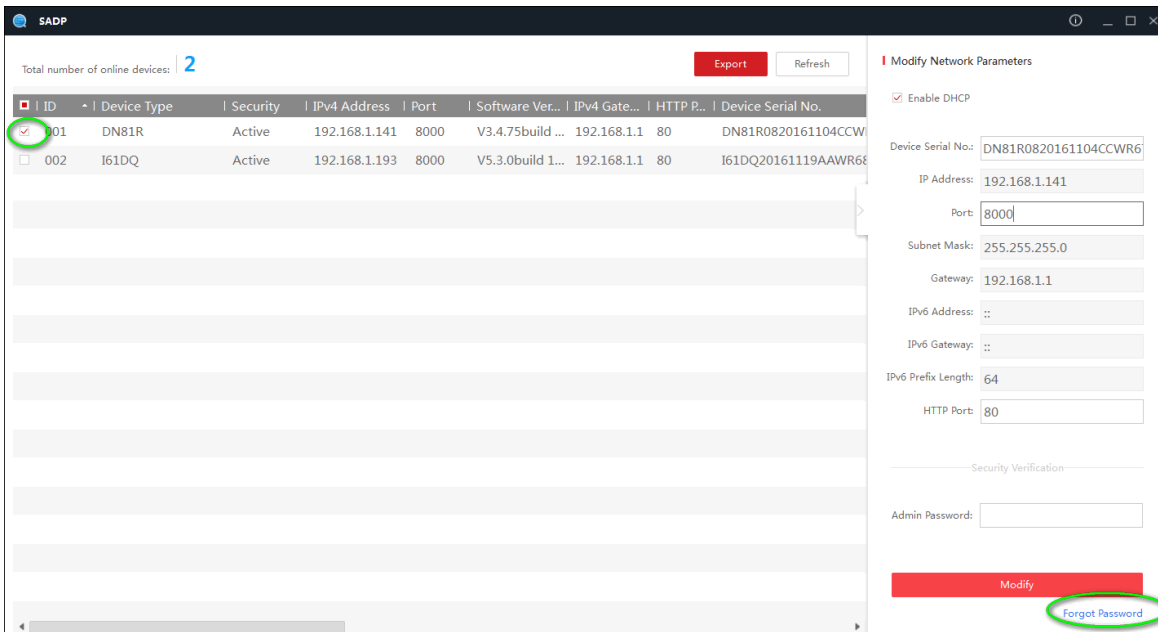

5. Click export and select the path to export a file. Please don't change the file's name.
6. XML file will be saved on your PC